
GRANNGÅRDEN
ETABL.1880

Parts and assembly overview

Wheelbarrow 98737 - Parts, sizes and quantities.

ASSEMBLY OVERVIEW

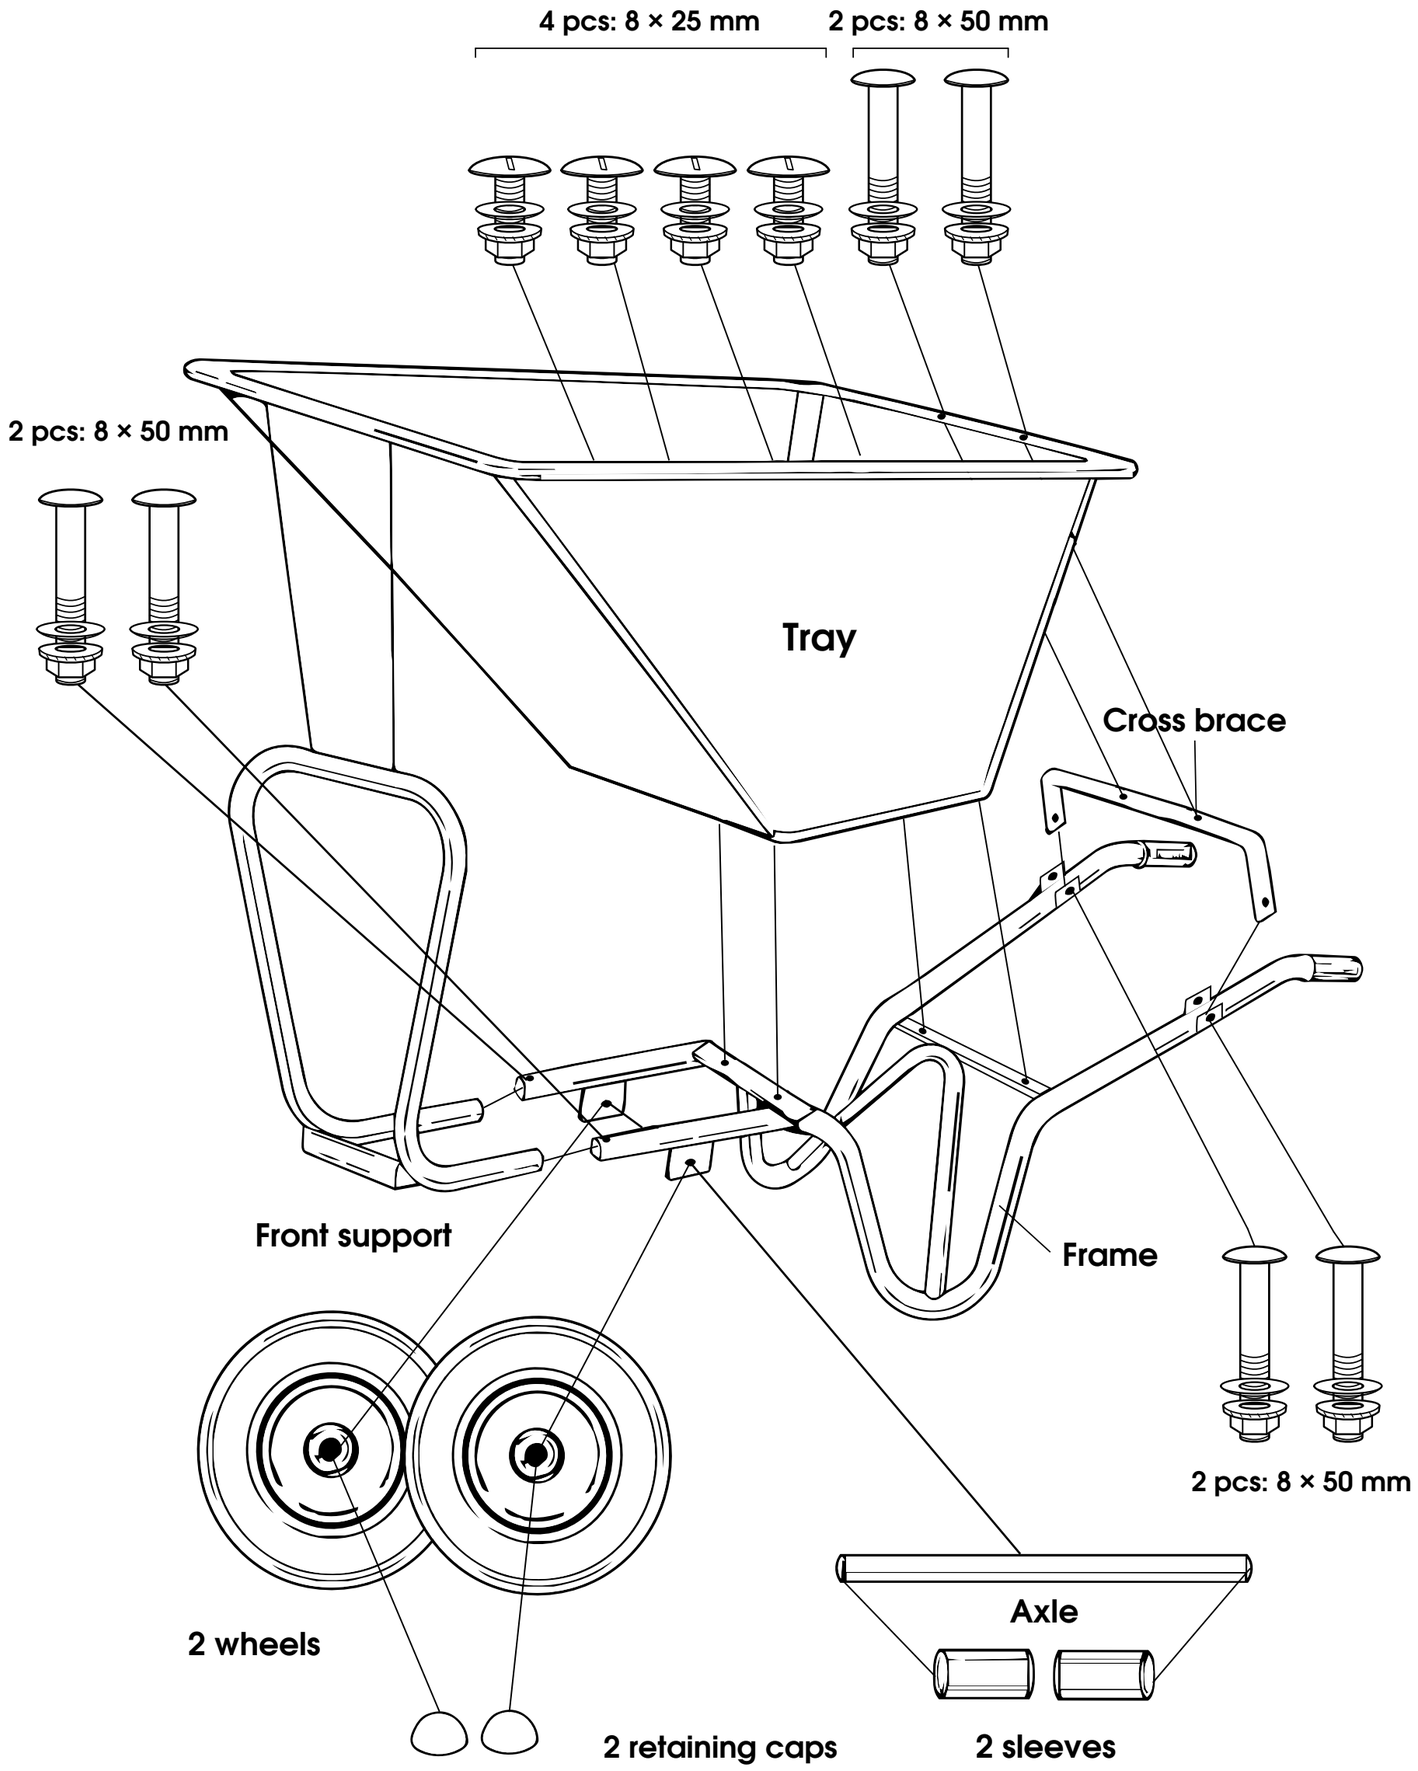


PARTS LIST

	Qty.
Frame with handles	1 set
Front support	1
Cross brace	1
Tray	1
Axle	1
Sleeves	2
Wheels	2
Retaining caps	2
8 × 25 mm bolts Large head	4
8 × 50 mm bolts Long shank	6
Flat washers For the bolts	10
Flange nuts	10

ONE SET PER BOLT
Use 1 flat washer and 1 flange nut with each bolt.
Total: 4 short + 6 long bolts.

BOLT FITTINGS

 Flat washer

 Flange nut

IMPORTANT: Keep all bolts loose until the final tightening in Step 6.


GRANNGÅRDEN
ETABL.1880

Assembly - step by step

Each bolt takes one flat washer and one flange nut. Keep bolts loose until Step 6.

1 Attach the front support


2 bolts: 8 × 50 mm
2 flat washers + 2 flange nuts

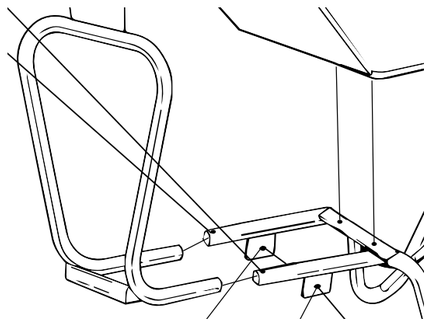

Fit the front support to the frame. Leave both bolts loose.

2 Attach the cross brace


2 bolts: 8 × 50 mm
2 flat washers + 2 flange nuts

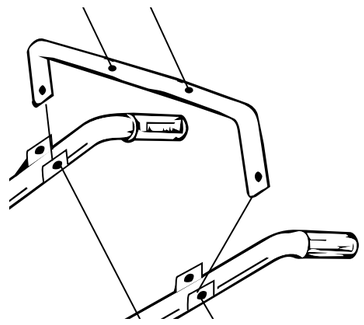

Fit the cross brace between the handles of the frame. Leave both bolts loose.

3 Fit the tray


4 bolts: 8 × 25 mm + 2 bolts: 8 × 50 mm
6 flat washers + 6 flange nuts

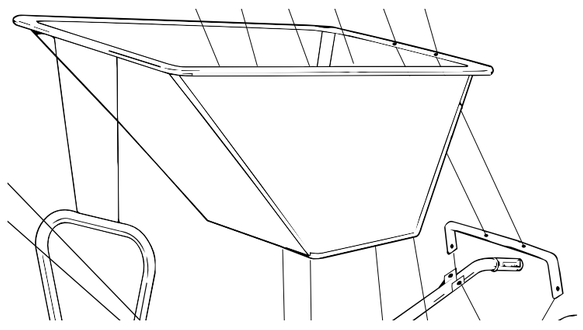

Fix the tray with 4 short bolts at the frame and 2 long bolts above the cross brace.

4 Fit the axle and sleeves


1 axle + 2 sleeves

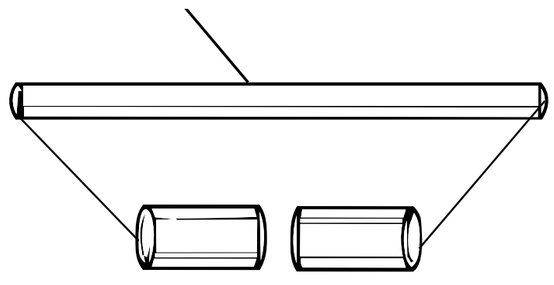

Insert the axle through the frame's axle brackets. Fit the two sleeves as shown in the overview.

5 Fit and secure the wheels

2 wheels + 2 retaining caps

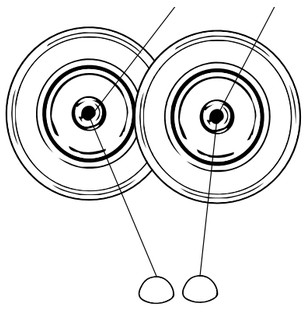

Fit one wheel at each end of the axle. Secure each wheel with a retaining cap.

6 Align, tighten and check

Final tightening of all 10 bolt sets

- ✓ All 10 bolts tightened
- ✓ Wheels rotate freely
- ✓ Both retaining caps secure

Stand the wheelbarrow upright. Align the parts and tighten all 10 bolts securely.